
OWNER'S MANUAL: Vertical Wall Mountable Server Rack (2U – 4U)

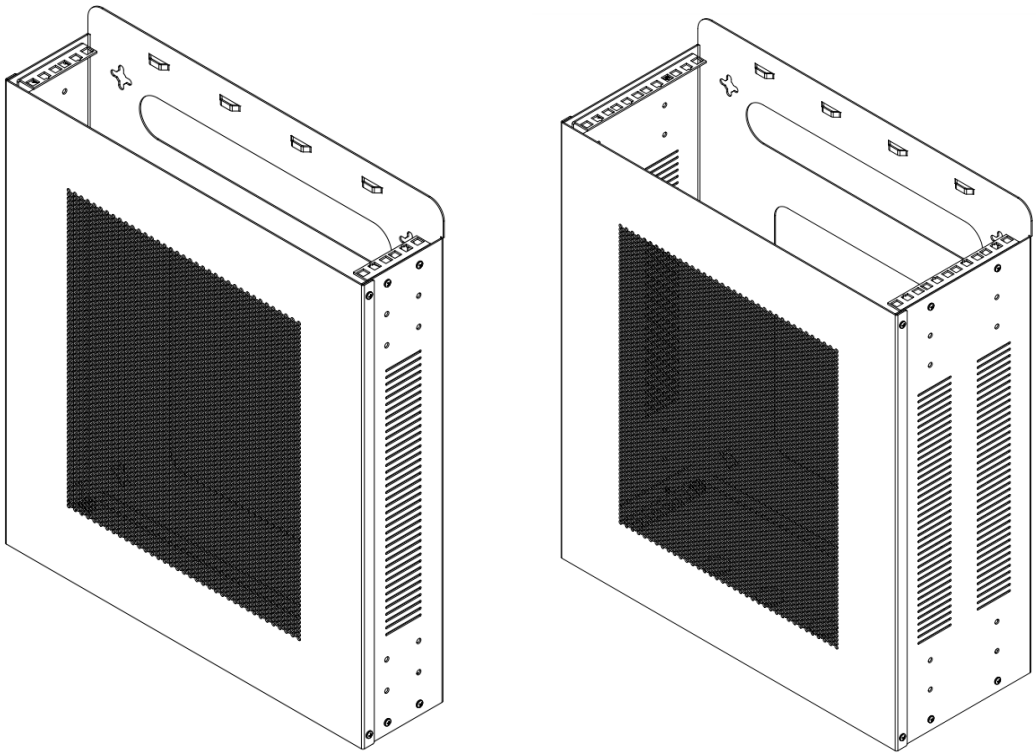

THIS MANUAL APPLIES TO THE FOLLOWING SKUs: 00301235, 00301236

Keep this information for further reference.

Thank you for purchasing a NavePoint product. If you have any questions regarding the installation or use of your product, please call us at 888.505.1363.

Please examine the product for any damaged parts. If any part is damaged or missing, contact NavePoint for assistance. Do not attempt to install or use product if it has been damaged. This product contains small items that could be a choking hazard – keep these items away from children.


During installation, lay product contents on cardboard or other protective surface to avoid any damage.

Do not use with equipment that is heavier than the indicated weight capacity for this product. This product is designed to be installed indoors on wood stud walls, solid concrete walls or brick walls. Make sure that the supporting surface will safely support the weight of the equipment and all attached hardware and components. It is recommended that installation be performed by a qualified installer. NavePoint Assumes no responsibility for the use, application, or reliability of the software and/or hardware that you install into the product. Always install the heaviest equipment in the bottom of the product. NavePoint cannot be held responsible for damage to equipment or personal injury resulting from improper use or installation of product.

Maintenance: Check that the product is secure and safe to use at regular intervals (at least every three months).
Limitations of Liability: In no event will NavePoint, LLC. be liable for any damages, whether direct or indirect, special, punitive, incidental or consequential damages (including, but not limited to, lost profits or revenue, loss of use, lost business opportunities or loss of goodwill) or for the costs of procuring substitute products, arising out of or in connection with the use of the product, whether such liability arises from any claim based upon contract, warranty, tort (including negligence), product liability or otherwise, whether or not seller has been advised of the possibility of such loss or damage. In no event will seller's total cumulative liability, from all causes of action and all theories of liability, exceed the total amounts actually paid to seller by customer for the item that gives rise to any liability hereunder.



© 2019 NavePoint, LLC

1. Feature Identification

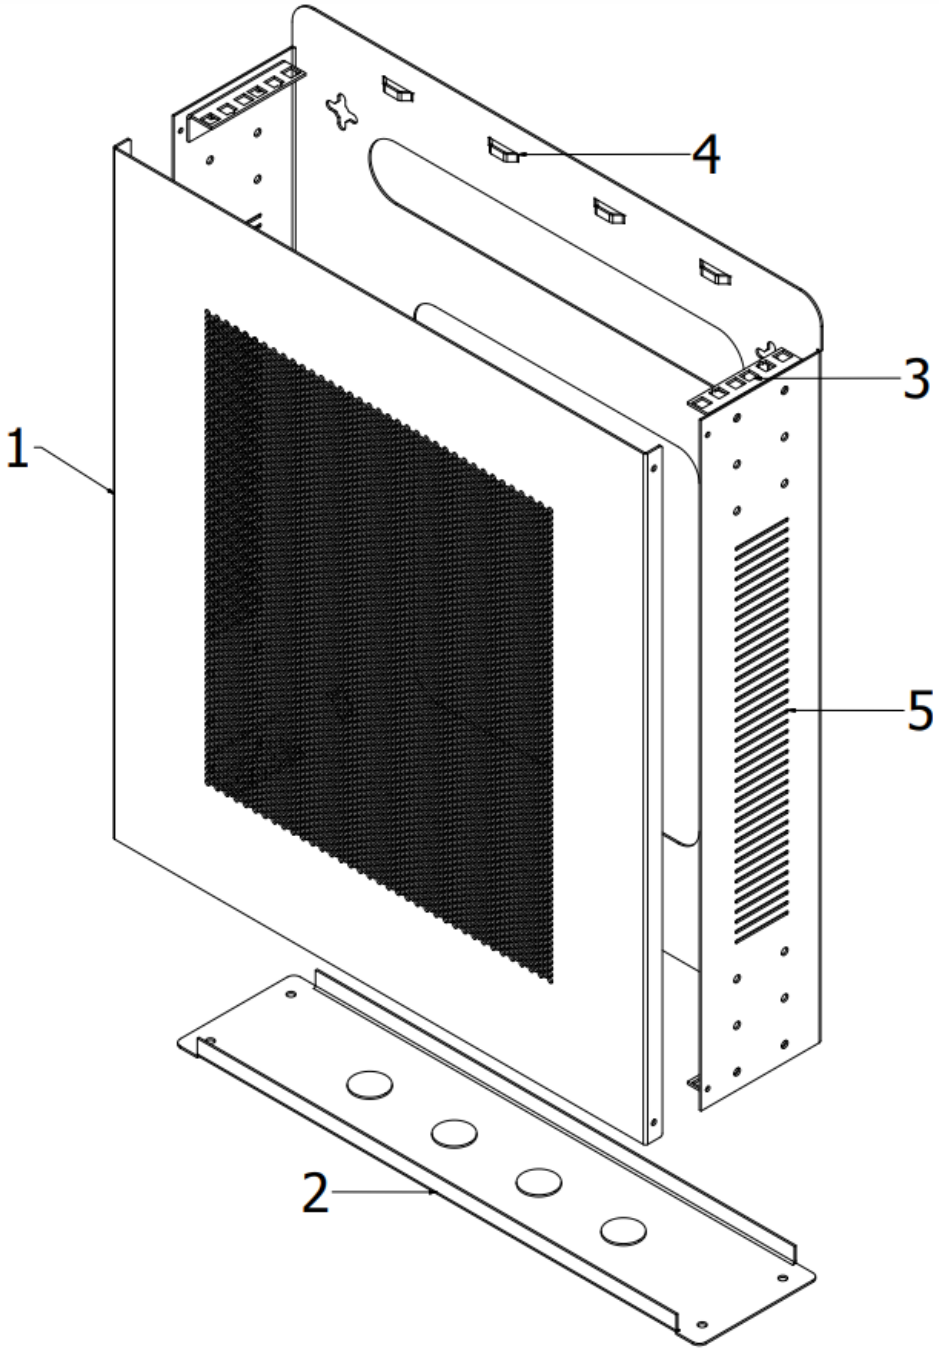

1. **Perforated Front Cover**
2. **Bottom Panel with cable access Holes**
3. **Mounting Rails (4x)**
4. **Cable Tie Mounts (4x)**
5. **Vents**

-Adjusting Mounting Rail Depth

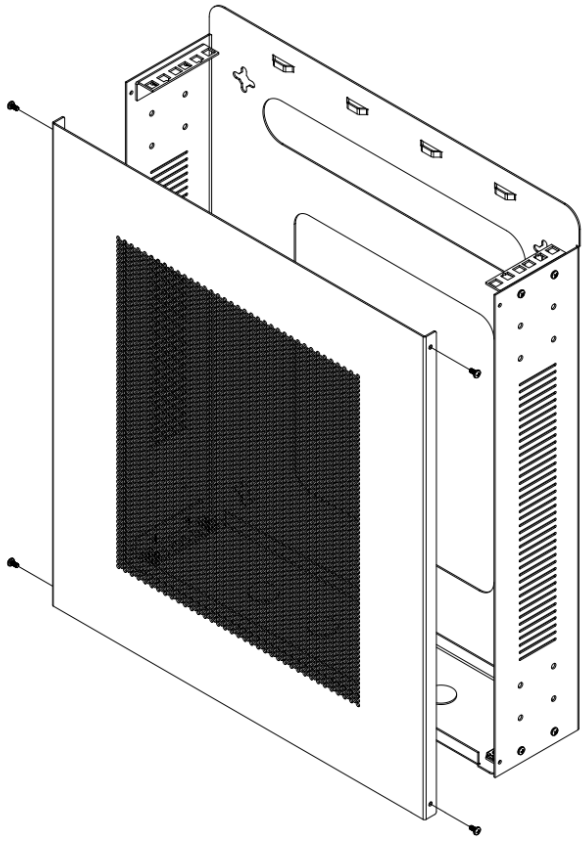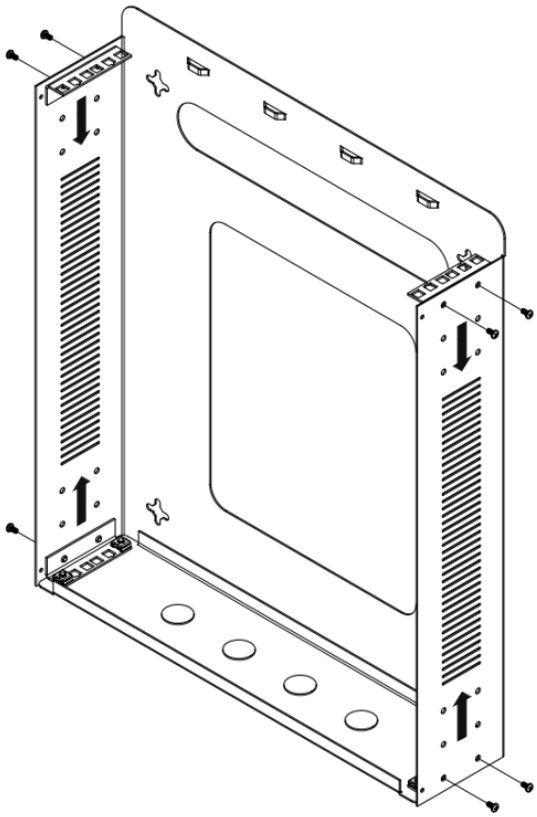
Remove Front Cover	Adjust Rails
	

The rails can be adjusted in 1.5-inch increments for mounting depths.

1. Disassemble the Front Cover by removing 2 M4 Screws on each side of Front Cover.
2. Remove the screws fastening each of the mounting rails to the enclosure.
3. Slide the mounting rails to the desired depth and reattach them.


Model	Mounting Depth (Adjustable)
2U	16” to 22” (406.4mm to 558.8mm)
4U	16” to 22” (406.4mm to 558.8mm)


-Removeable Bottom Panel

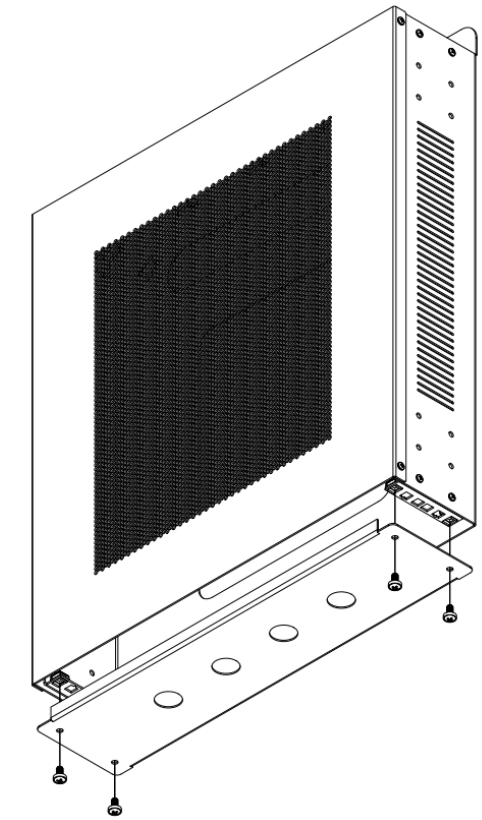

- Bottom Panel can be removed for equipment that is longer than 22 in.



-Cable Access and Management

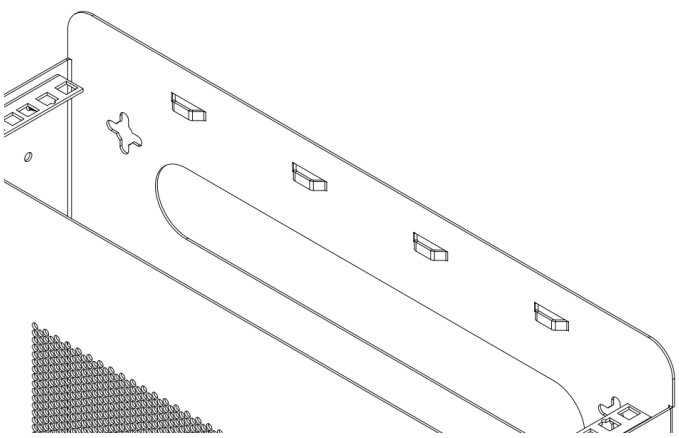

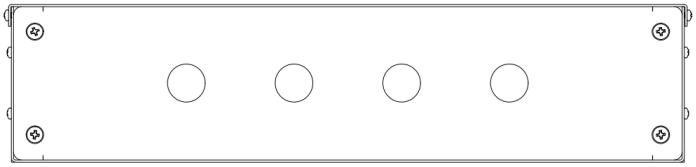

- 4 Cable Tie Mounts are provided.
- The Bottom Panel of the enclosure has 4 circular cable access ports for convenient cable management (Diameter of each hole: 28mm).



-Mounting the Enclosure to the Wall

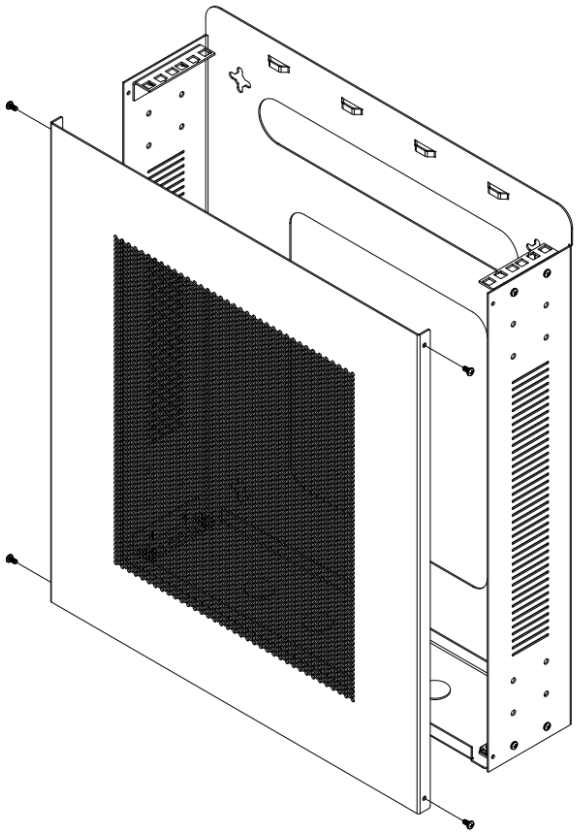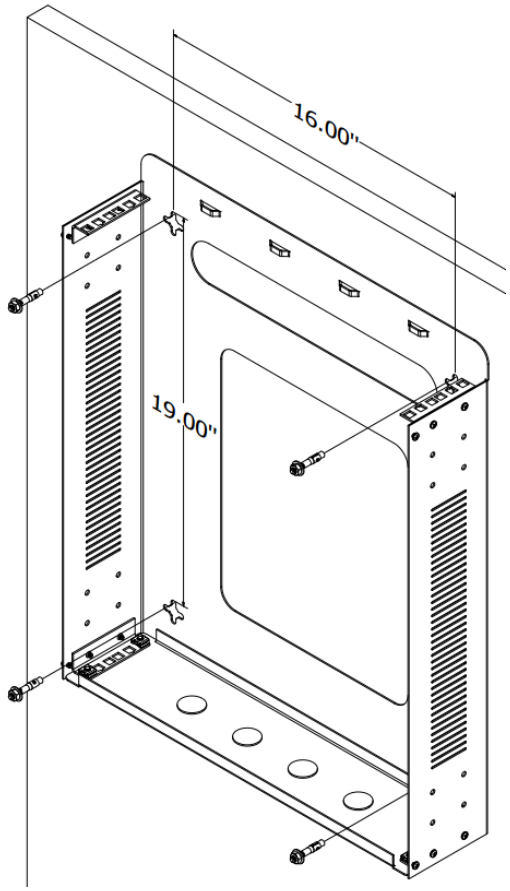Remove Front Cover	Mount to Wall
	


1. Disassemble the Front Cover by removing 2 M4 Screws on each side of Front Cover.
2. Attach the Enclosure to a wall or other suitable mounting surface using 4 appropriate mounting screws/anchors (not included).


Warning: The enclosure can hold up to 60 pounds evenly distributed. Make sure wall surface can hold weight of the enclosure and equipment.

2. Equipment Installation

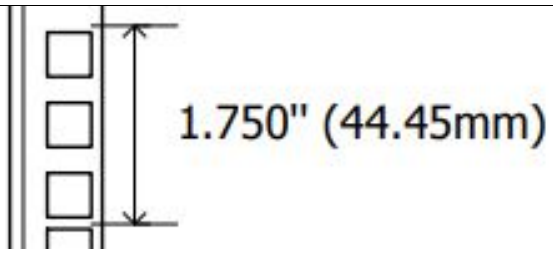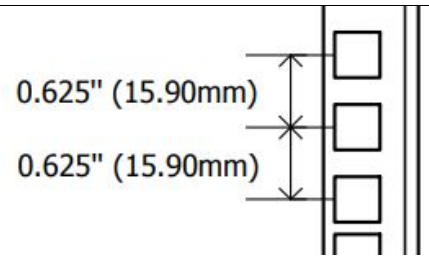1 Rack Unit	
	

-Squared Hole Mounting

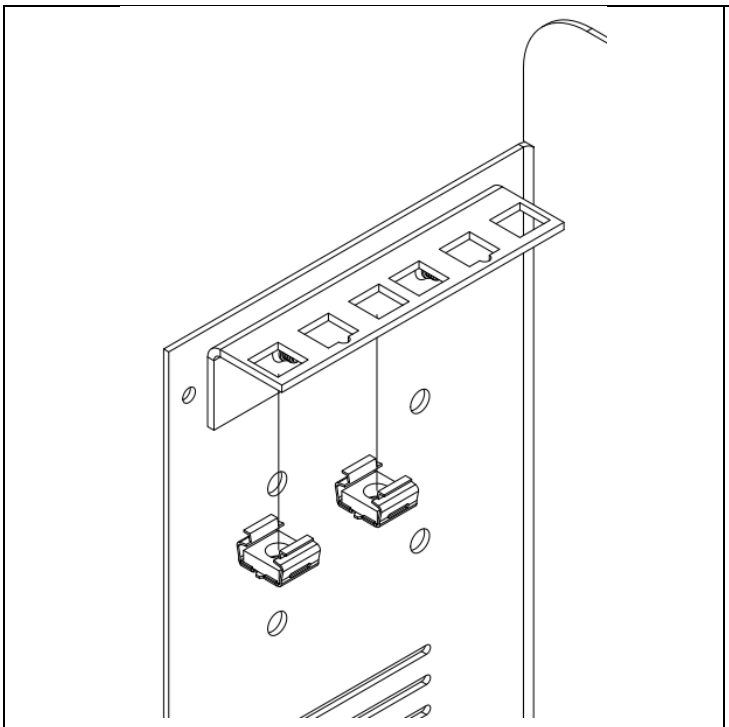

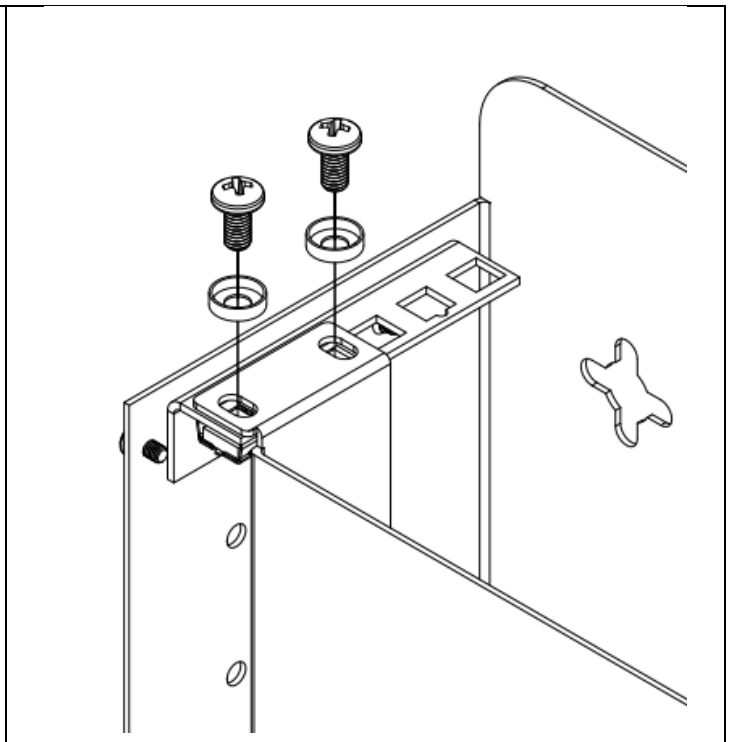

1. Install silver M6 Cage Nuts into the square openings to provide an attachment point for the silver M6 Mounting Screws. Note: Consult your equipment documentation to determine how many cage nuts will be required and where they will need to be installed.
    a. From the inside of the Mounting Rails, insert one of the flanges of the cage nut through the square opening. Press it against the side of the square opening.
    b. Compress the cage nut at the sides slightly to allow the remaining flange to fit through the square opening. When the cage nut is properly installed, both flanges will protrude through the square opening and will be visible on the outer surface of the mounting rail. Repeat steps 1a and 1b until all required cage nuts are installed.
2. After installing the required cage nuts, use the included black M6 Mounting Screws and M6 Washers to secure your equipment into the installed M6 Cage Nuts.